



CITY

60065



LEGO.com/city

2






1x



1x


1

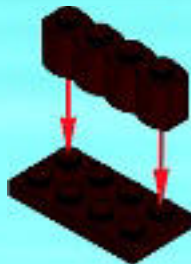



1x

2

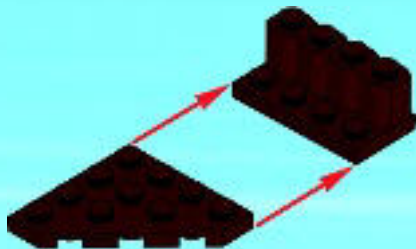

4



1x



1x

3



2x

4





1x

5



6



1x



1x

6



1x

7









1x

1






2x

2



2x

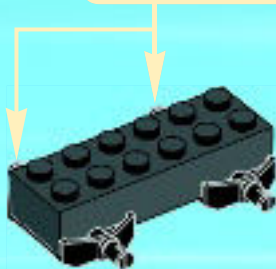

2x

3





2x


4





2x

5

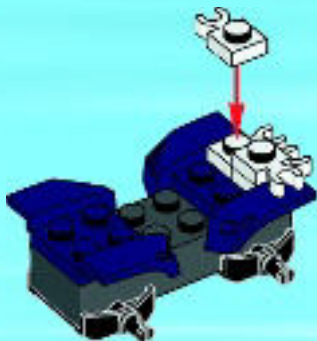

1x

6





1x

7





2x




2x



2x

8

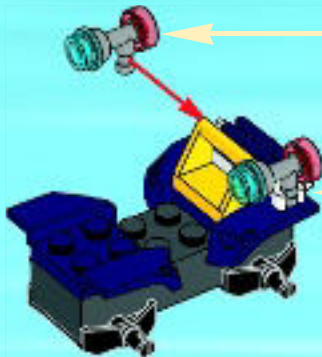

1



2



2x




1x



1x

9

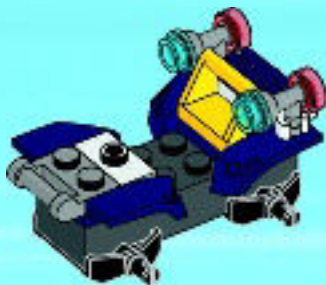



1x



1x

10



1x

11





1x




2x

12

1



2

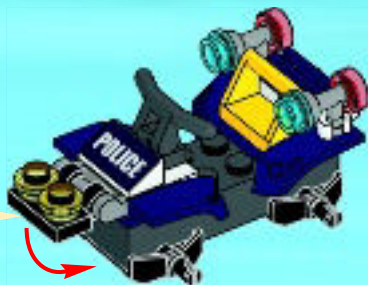



4x



4x

13



4x





1x





1x



1x

14

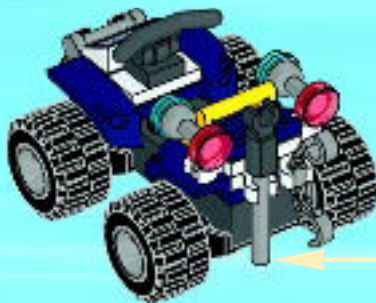

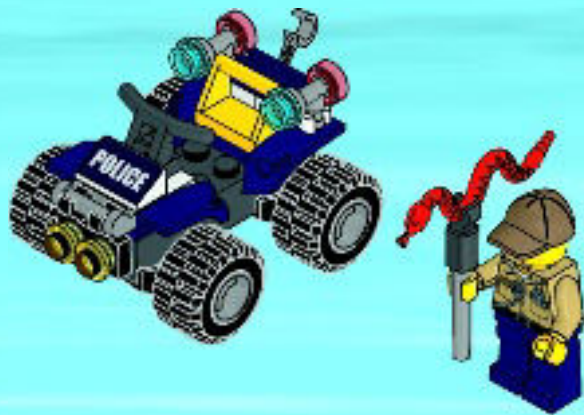



CITY



LEGO.COM/CITY



60047



60046



60044











60043












60042



60041


 1x
 6100792

 1x
 6051511

 4x
 4613256

 1x
 6100770

 1x
 6100765

 1x
 243224

 1x
 6021844

 1x
 6018687


 2x
 3005744

 1x
 4183133

 2x
 4646864

 2x
 3005743

 1x
 4289538

 1x
 4556158

 4x
 4568644

 2x
 615726

 1x
 4598955


 1x
 4524098

 1x
 6100774

 2x
 4295260








 1x
 4114052






 1x
 4255624






 1x
 4505066

 1x
 4162916

 2x
 6097585


 1x
 6022579

 2x
 4211150

 1x
 4211219

 1x
 4211186

 1x
 4211181

 1x
 4224732

 2x
 4211503


 1x
 4244627

 1x
 6093527

 1x
 4261908

 1x
 4211045

 1x
 4210875


 1x
 4641048

 4x
 4211764

 1x
 6015890

 1x
 6071226

 1x
 4210934



Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor
LEGO.com/service or dial














 : 00800 5346 5555


 : 1-800-422-5346