




# CITY

60066





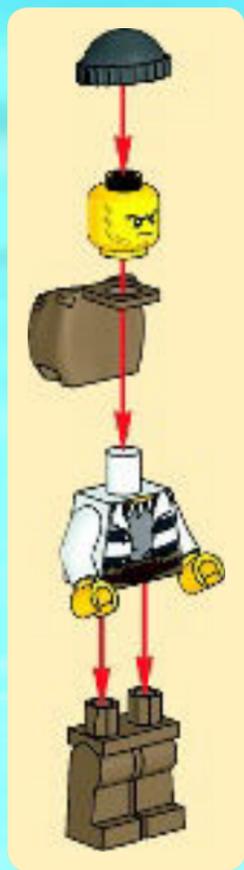







1x

1

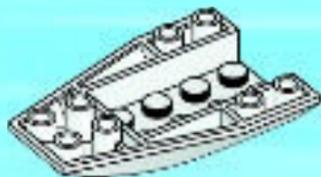

2x


2

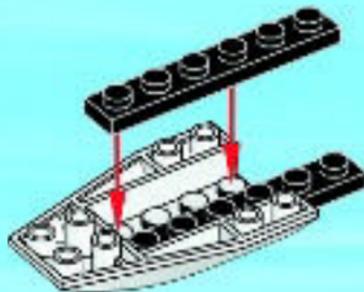



1x


**3**

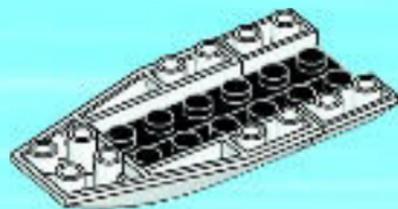



2x

4

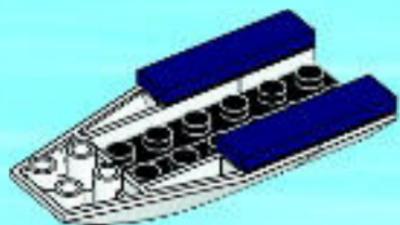

1x


5





1x


6

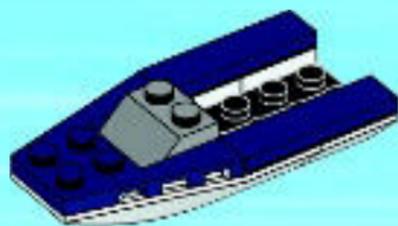



1x

7

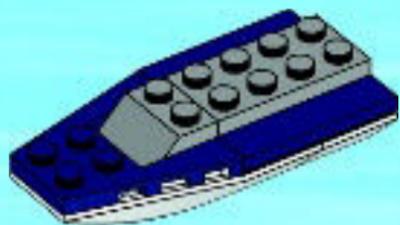

2x



1x

8





1x


9





2x

10

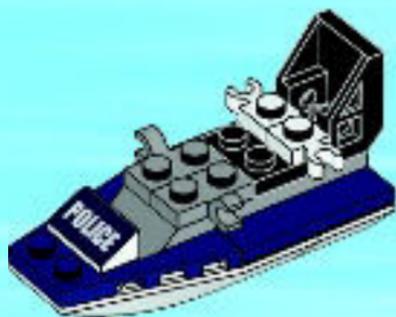

2x

11





1x

# 12





1x




1x

# 13



2x


# 14

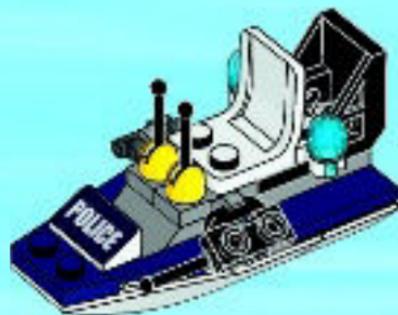



1x


15

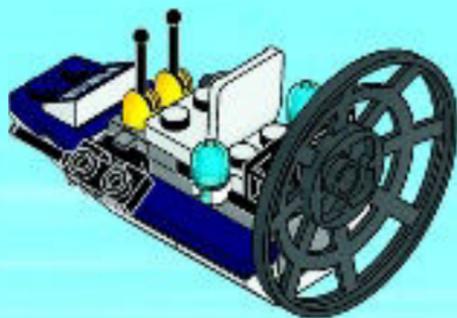




1x


# 16

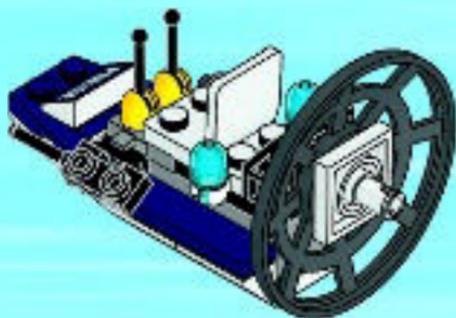

1x

# 17

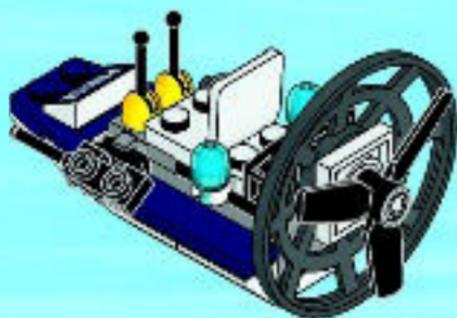

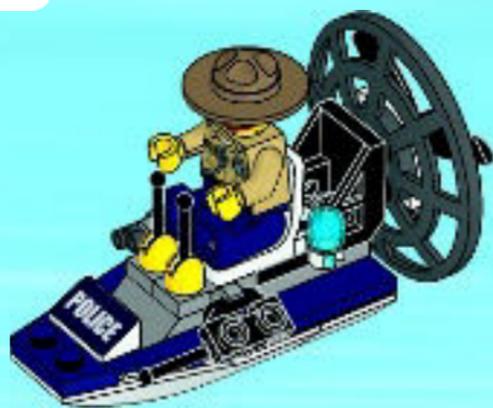




1x

1



1x

2

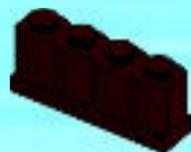




2x



1x

3

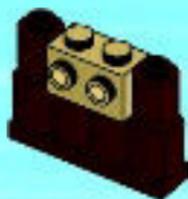



1x

4




2x



1x


5

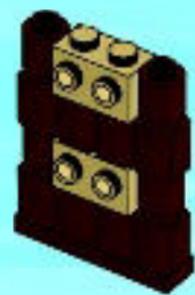



1x


6

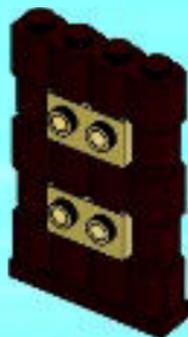



1x

7

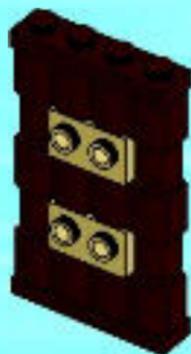

2x



1x


8





1x


1

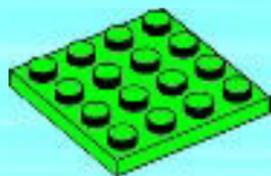




1x

2

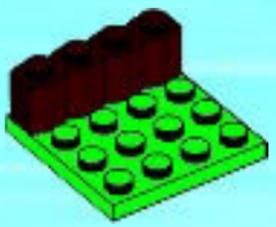

2x


3

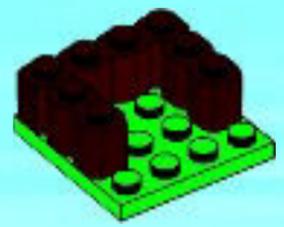



1x

4

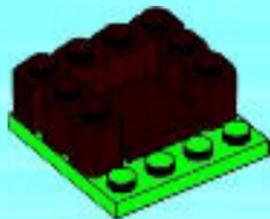




1x



1x

5

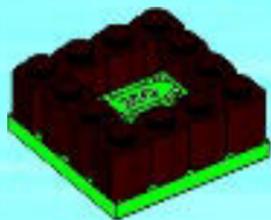

1x



1x

6





1x




1x



1x

7

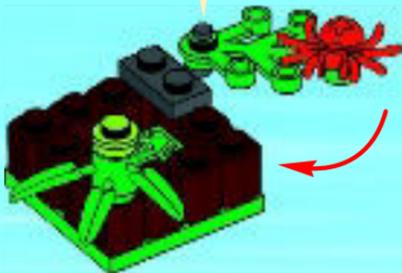





1x

8



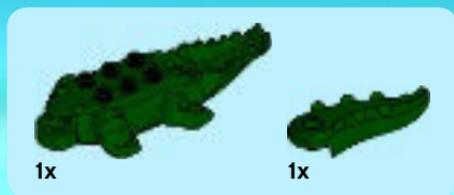


1

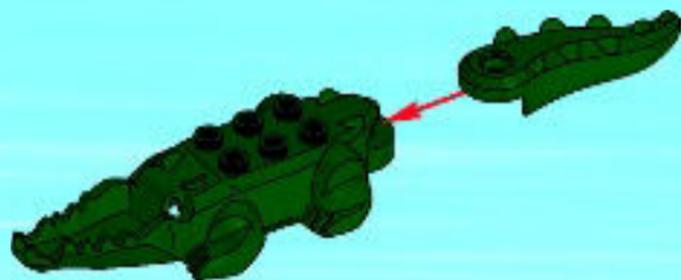




1x

2

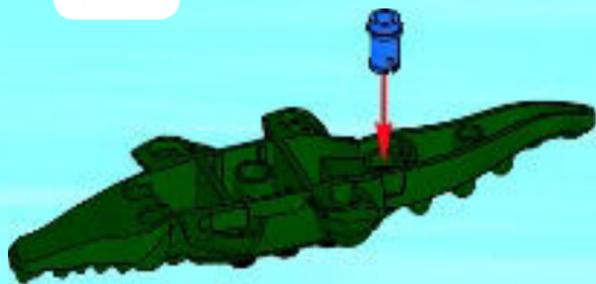

1x

3

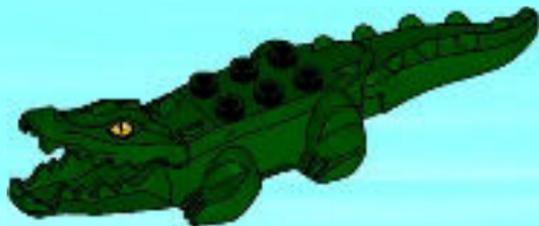



# CITY



60069



60068



60067

 
 


60066



60065

[LEGO.COM/CITY](http://LEGO.COM/CITY)

 1x 6100792	 1x 6103711	 2x 366626	 2x 4295260	 2x 6103985	 5x 4211181	 1x 4611703
 1x 4173943	 1x 6100765	 1x 6021678	 1x 4114348	 1x 6102890	 2x 4609635	 1x 4224253
 1x 4261693	 1x 4593768	 1x 4157108	 1x 6104296	 2x 4162916	 2x 4211190	 1x 4210934
 2x 4613256	 1x 4114052	 1x 4157108	 2x 4497952	 2x 4162916	 2x 6028812	 1x 4211051
 1x 4293876	 1x 4143005	 1x 6100054	 1x 3005744	 1x 6104420	 1x 4641048	 1x 4211051
 1x 407901	 2x 74156	 1x 4598897	 1x 4183133	 1x 6103387	 1x 4211410	 1x 4211006
 1x 6100770	 1x 6103921	 1x 4599984	 1x 4267425	 1x 6103384	 1x 4211385	 1x 6093516
 1x 6104574	 1x 6100203	 1x 4243821	 1x 4524098	 4x 4211183	 2x 4211180	
 2x 6024495	 1x 6112620	 1x 4243821	 1x 6100775	 2x 4211180	 2x 4211180	
	 1x 6018687	 1x 242328	 1x 4598955	 1x 4271949		



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346